



Talon 44/64 CE

INSTALLATION & OPERATION MANUAL

Document Number: 930-109 REV: - REV DATE: 06-9-04

©2004 GENERAL BINDING CORPORATION ALL RIGHTS RESERVED.

Do not duplicate without written permission.

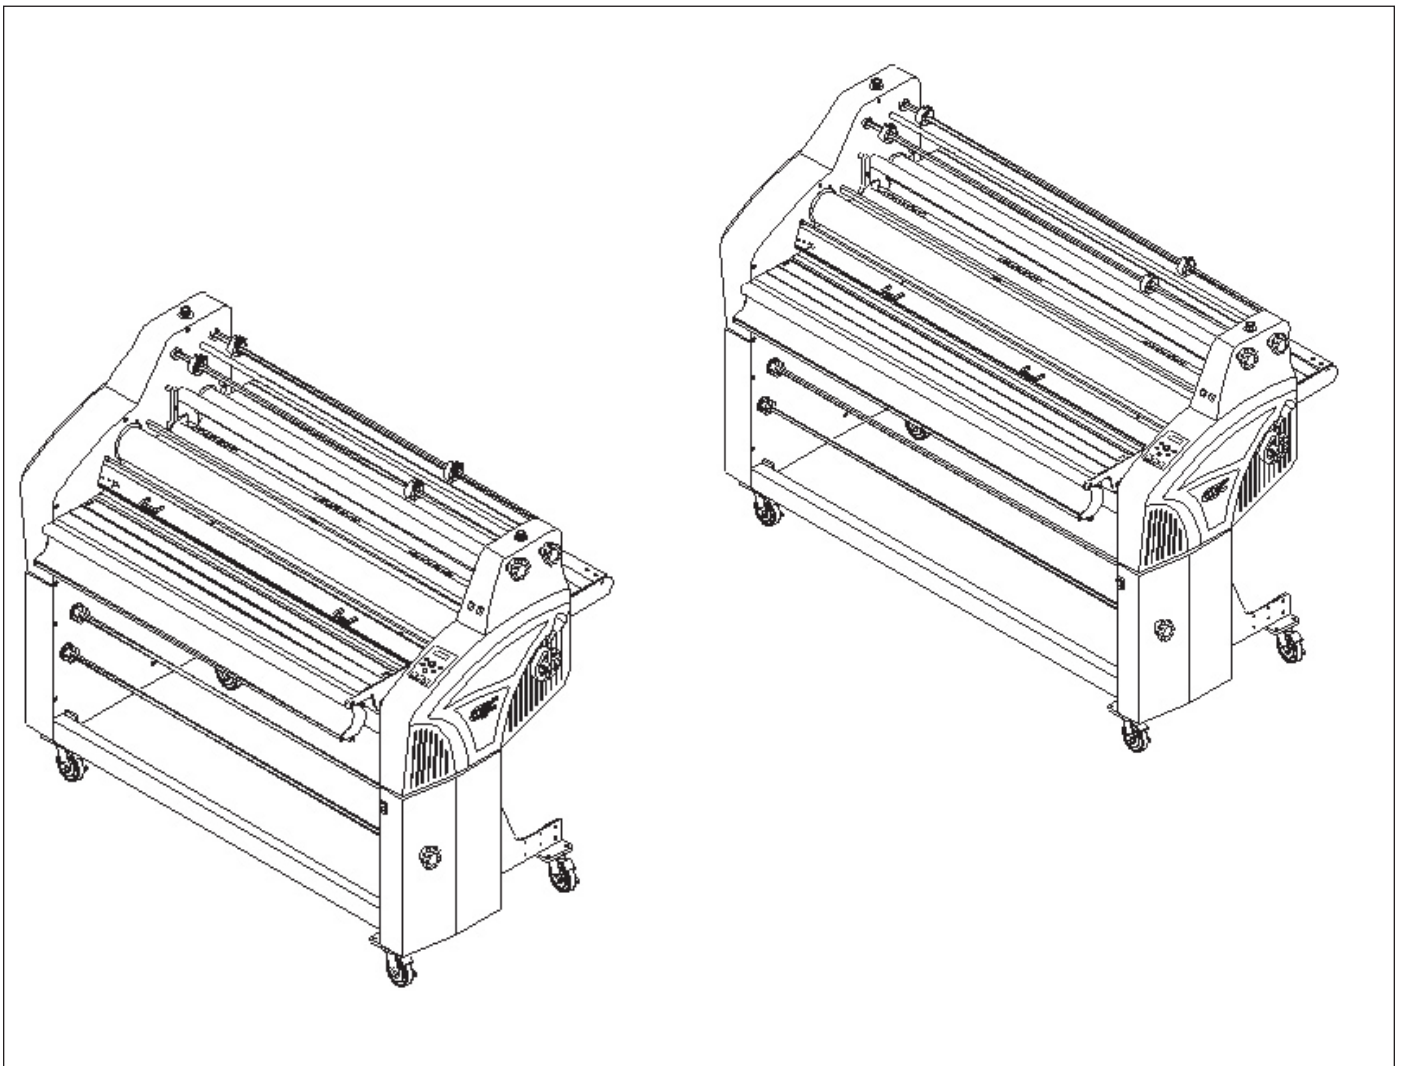


Table of content

Cover 1

Table of Content..... 3

Important Safety Instructions 5

Important Safeguards 7

General 7

Electrical 7

Service 7

Warranty 9

Specifications 11

Talon 44 11

Talon 64 12

Pre-Installation..... 13

Installation..... 15

Control Guide..... 17

Power ON/ OFF 17

Control Panel Display 17

Control Panel 17

Rewinder Selection Switch 18

Upper Rewinder Direction Switch 19

Lower Rewinder Direction Switch 19

Rear Control Switch 19

Foot SW Enable 19

Features Guide..... 20

E-Stop 20

Safety Shield Interlock Latch 20

Safety Shield 20

Feed Table 20

Heat Rollers 20

Pull Rollers 20

Roller Handle 20

Idler Bar 21

Chill Idler 21

Cooling Fans 21

Film Shaft 21

Core Adaptors 21

Lower Shaft Lock 21

Unwind/ Rewind Tension 21

Rewind Shaft 21

Rewind Tube 21

Rewind Adaptors 21

Rear Table 22

Rear Slitter 22

Film Web 22

Nip Point 22

Foot Switch 22

Print Unwind Basket 22

Separator Bar Option 22

Rewind Kit Option 22

Operating Instructions 23

Film Loading and Threading 23

Load a Roll of Film 23

Loading Top Thermal Film 24

Loading Top PSA Film 24

Loading Top Mount Adhesive 25

Loading Bottom Thermal Film 25

Loading Bottom PSA Film 26

Loading Bottom Mount Adhesive 26

Threading Card Procedure 27

Start Laminating 28

Tacking New Film To Existing Film 29

To Unweb The Laminator 30

Clearing A Film Jam 30

Applications 31

Pre-Coating Boards 31

Using Rear Rollers 31

Mounting Pre-Coated Boards 31

PSA Encapsulation 32

Thermal Encapsulation 32

Accushield 32

The Art Of Lamination..... 33

Basic Rules 33

Film Tension 33

Heat 34

Output 34

Maintenance 35

Caring for the Talon 44/64 35

Disclaimer..... 37

Troubleshooting Guide 39

Service Agreement..... 39

Important Safety Instructions

YOUR SAFETY AS WELL AS THE SAFETY OF OTHERS IS IMPORTANT TO GBC. IN THIS INSTRUCTION MANUAL AND ON THE PRODUCT, YOU WILL FIND IMPORTANT SAFETY MESSAGES REGARDING THE PRODUCT. READ THESE MESSAGES CAREFULLY. READ ALL OF THE INSTRUCTIONS AND SAVE THESE INSTRUCTIONS FOR LATER USE.

THE SAFETY ALERT SYMBOL PRECEDES EACH SAFETY MESSAGE IN THIS INSTRUCTION MANUAL. THE SYMBOL INDICATES A POTENTIAL PERSONAL SAFETY HAZARD TO YOU OR OTHERS. THE FOLLOWING WARNINGS ARE FOUND UPON THIS PRODUCT. THIS SAFETY MESSAGE MEANS THAT YOU COULD


⚠ ADVERTENCIA	⚠ ATTENTION		⚠ WARNING
Riesgo de choque eléctrico. No abra. Adentro no hay piezas reparables por el usuario. Mantenimiento solamente por personal calificado.	Risque de secousse électrique. Ne pas ouvrir. Pas de pièces réparables par l'utilisateur. Entretien seulement par personnel qualifié.		Electrical shock hazard. Do not open. No user serviceable parts inside. Refer servicing to qualified service personnel.

BE SERIOUSLY HURT OR KILLED IF YOU OPEN THE PRODUCT AND EXPOSE YOURSELF TO HAZARDOUS VOLTAGE.

THIS SAFETY MESSAGE MEANS THAT YOU COULD

⚠ ADVERTENCIA	⚠ ATTENTION		⚠ CAUTION
RODILLOS CALIENTES. PUNTO DE PINCHAMIENTO. Mantener manos y ropa a distancia.	ROULEAUX CHAUDS. POINT DE PINCEMENT. Tenir mains et vêtements à l'écart.		HOT ROLLS. PINCH POINT. Keep hands and clothing away.

BE BURNED AND YOUR FINGERS AND HANDS COULD BE TRAPPED AND CRUSHED IN THE HOT ROLLERS. CLOTHING, JEWELRY AND LONG HAIR COULD BE CAUGHT IN THE ROLLERS AND PULL YOU INTO THEM.

⚠ ADVERTENCIA	⚠ ATTENTION		⚠ CAUTION
NAVAJA FILOSA. Mantener manos y dedos a distancia.	LAME COUPANTE. Tenir mains et doigts à l'écart.		SHARP BLADE. Keep hands and clothing away.

THIS SAFETY MESSAGE MEANS THAT YOU COULD CUT YOURSELF IF YOU ARE NOT CAREFUL.



WARNING: THE SAFETY ALERT SYMBOL PRECEDES EACH SAFETY MESSAGE IN THIS INSTRUCTION MANUAL. THE SYMBOL INDICATES A POTENTIAL PERSONAL SAFETY HAZARD TO YOU OR OTHERS.



WARNING: DO NOT ATTEMPT TO SERVICE OR REPAIR THE TALON 44/64 CE LAMINATOR.



WARNING: DO NOT CONNECT THE LAMINATOR TO AN ELECTRICAL SUPPLY OR ATTEMPT TO OPERATE THE LAMINATOR UNTIL YOU HAVE COMPLETELY READ THESE INSTRUCTIONS. MAINTAIN THESE INSTRUCTIONS IN A CONVENIENT LOCATION FOR FUTURE REFERENCE.



HOT SURFACE. USE CAUTION AS HOT SURFACE COULD CAUSE BURNS.

Important Safeguards



WARNING: TO GUARD AGAINST INJURY, THE FOLLOWING SAFETY PRECAUTIONS MUST BE OBSERVED IN THE INSTALLATION AND USE OF THE LAMINATOR.

General

Keep hands, long hair, loose clothing, and articles such as necklaces or ties away from the front of the heat and pull rollers to avoid entanglement and entrapment.

The heat rollers can reach temperatures over 300°F (150°C). Avoid contact with the heat rollers during operation or shortly after power has been removed from the laminator.

Keep hands and fingers away from the path of the sharp film cutter blade located at the film exit.

Do not use the laminator for other than its intended purpose.

Avoid moving the laminator on uneven floor surfaces. Never tilt the laminator.

Do not defeat or remove electrical and mechanical safety equipment such as interlocks, shields and guards.

Do not insert objects unsuitable for lamination or expose the equipment to liquids.

Electrical

The laminator should be connected only to a source of power as indicated in these instructions and on the serial plate located on the rear of the laminator. Contact an electrician should the attachment plug provided with the laminator not match the receptacles at your location.



CAUTION: The receptacle must be located near the equipment and easily accessible.

Do not operate the laminator with a damaged power supply cord or attachment plug, upon occurrence of a malfunction, or after the laminator has been damaged. Contact GBC's Technical Service Department or your dealer/distributor for assistance.

Service

Perform only the routine maintenance procedures referred to in these instructions.



WARNING: Do not attempt to service or repair the laminator.

Disconnect the plug from the receptacle and contact GBC's Technical Department or your dealer/distributor when one or more of the following has occurred.

- The power supply cord or attachment plug is damaged.
- Liquid has been spilled into the laminator.
- The laminator is malfunctioning after being mishandled.
- The laminator does not operate as described in these instructions.

Limited 90-Day Warranty

GBC warrants to the original purchaser for a period of ninety days on labor and one year on parts after installation that this laminator is free from defects in workmanship and material under normal use and service. GBC's obligation under this limited warranty is limited to replacement or repair, at GBC's option, of any part found defective by GBC without charge for material or labor.

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED. WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED. ANY REPRESENTATIONS OR PROMISES INCONSISTENT WITH, OR IN ADDITION TO, THIS LIMITED WARRANTY ARE UNAUTHORIZED AND SHALL NOT BE BINDING UPON GBC. IN NO EVENT SHALL GBC BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER OR NOT FORESEEABLE.

This limited warranty shall be void if the laminator has been misused; mishandled; damaged by negligence, by accident, during shipment, or due to exposure to extreme conditions; repaired, altered, moved, or installed by anyone other than GBC or its authorized agents; or if incompatible film was used. GBC's obligation under this limited warranty does not include routine maintenance, cleaning, adjustment, normal cosmetic or mechanical wear, or freight charges.

Without limiting the generality of the previous paragraph, GBC's obligation under this limited warranty does not include:

1. Damage to the rollers caused by knives, razors, or other sharp tools; by any foreign objects falling into the working area of the laminator; or by cleaning the laminator with solutions or materials that harm its surfaces;
2. Damage caused by adhesives; nor
3. Damage caused by lifting, tilting or attempting to position the laminator other than rolling it on its castors across even surfaces.

FOR EUROPEAN UNION RESIDENTS ONLY: This guarantee does not affect the legal rights which consumers have under applicable national legislation governing the sale of consumer goods. Legislation governing the sale of consumer goods.

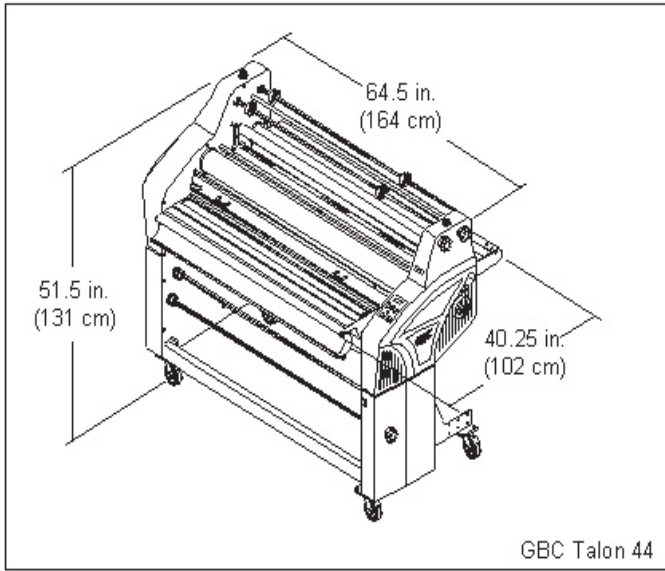


Fig 1

Specifications - Talon 44

Operating Speed:

Up to 10 fpm (3 mpm)

Max Temperature:

270 °F (132°C)

Max. Mounting Thickness:

1/2 in. (1.3 cm)

Max. Film Width:

43 in. (109 cm)

Dimensions (W x D x H):

64.5 in. x 40.25 in. x 51.5 in.

Unit alone: (Figure 1)

(164 cm x 102 cm x 131 cm)

Shipping:

67 in. x 43 in. x 62.5 in.

(170 cm x 109 cm x 159 cm)

Weight:

Unit alone: 788 lb. (357 kg.)

Shipping:

965 lb. (438 kg.)

Noise Rating:

LpA: 61dB A (Sound Pressure Level) Fans OFF

LpA: 65dB A (Sound Pressure Level) Fan ON

Electrical Requirements:

Refer to the serial plate located on the rear of the laminator for the specific electrical rating applicable to the unit.

Voltage: 400V, 3N, 50 Hz

Current: 7.3A

Power: 4000W

Phase: 3

Interrupting Capacity: 1500A

Ambient Air Temperature: 5-40 °C (41-104 °F)

Humidity Rating: 30-95% non-condensing

Altitude Rating: Up to 1000 Meters Min. (2540 Feet)

Intended Films and Applications:

Film: Thermal and PSA Films:

- Octiva™ Thermal
- Octiva™ Lo-Melt
- Artic™ Pressure Sensitive
- Artic™ Mounting Films
- AccuShield™

Applications:

- Signs
- Posters
- Event Graphics
- Trade Show Graphics
- Presentations
- Banners
- Store Signage
- Floor Graphics
- Backlit Displays
- Vehicle Graphics

Specifications - Talon 64

Operating Speed:

Up to 10 fpm (3 mpm)

Max Temperature:

270 °F (132 °C)

Max. Mounting Thickness:

1/2 in. (1.3 cm)

Max. Film Width:

61 in. (155 cm)

DIMENSIONS (W X D X H):

Unit alone: (Figure 2)

83 in. x 40.25 in. x 51.5 in.
(211 cm x 102 cm x 131 cm)

Shipping:

85 in. x 43 in. x 62.5 in.
(216 cm x 109 cm x 159 cm)

Weight:

Unit alone: 1030 lb. (467 kg.)

Shipping: 1250 lb. (567 kg.)

Noise Rating:

LpA: 61dB A (Sound Pressure Level) Fans OFF

LpA: 65dB A (Sound Pressure Level) Fan ON

Electrical Requirements:

Refer to the serial plate located on the rear of the laminator for the specific electrical rating applicable to the unit.

Voltage: 400V, 3N, 50 Hz

Current: 8.3A

Power: 4500 W

Phase: 3

Interrupting Capacity: 1500A

Ambient Air Temperature: 5-40 °C (41-104 °F)

Humidity Rating: 30-95% non-condensing

Altitude Rating: Up to 1000 Meters Min. (2540 Feet)

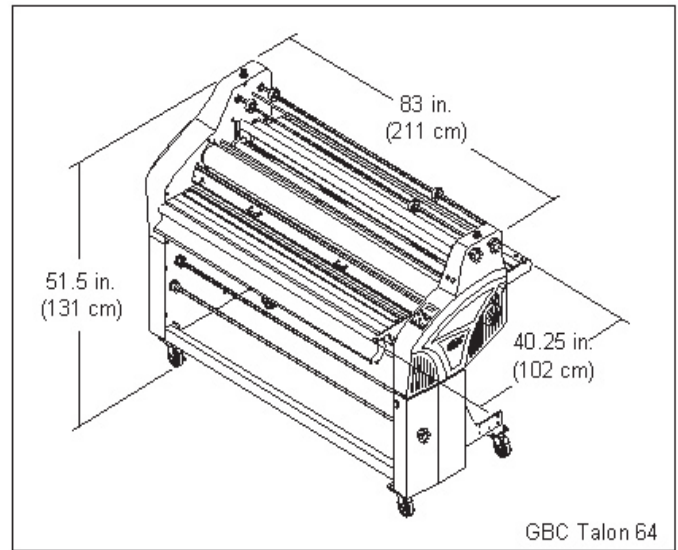


Fig 2

Intended Films and Applications:

Film: Thermal and PSA Films:

- Octiva™ Thermal
- Octiva™ Lo-Melt
- Artic™ Pressure Sensitive
- Artic™ Mounting Films
- AccuShield™

Applications:

- Signs
- Posters
- Event Graphics
- Trade Show Graphics
- Presentations
- Banners
- Store Signage
- Floor Graphics
- Backlit Displays
- Vehicle Graphics

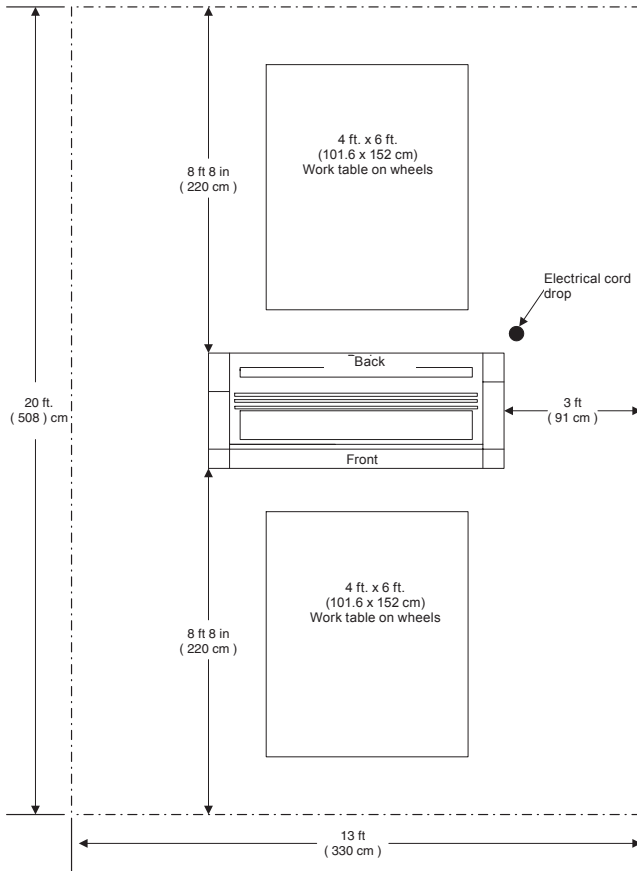


Fig 3

Pre- Installation

Before a Talon 44/64 Laminator can be installed, ensure the following requirements are met;

1. Are doorways and hallways wide enough for the laminator to be moved to the installation site?
2. Is there ample room for the laminator?
 - A work area must be established that allows for operation in both the front and rear of the laminator and provides space for efficient material flow. (Figure 3)
3. Is the environment appropriate for the laminator?
 - The laminator requires a clean, dust and vapor free environment to operate properly.
 - Avoid locating the laminator near sources of heat or cold. Avoid locating the laminator in the direct path of forced, heated or cooled air.

CAUTION: Air flow can cause uneven heating/ cooling of the rollers and result in poor output quality.

4. Have you contacted a certified electrician to wire the receptacle and ensure that adequate power is being supplied, having the appropriate capacity, over current protection and safety lockouts available?

Talon 44 requires:

- 380-400V 50/60 Hz, 3 phase 5 wire, 16 amp service required.

Machine is supplied with:

Cord

- manufacturer: SCAME PARRE
- type: 211.3237
- rating: 346V-415V, 32A, 3P+N+E

Plug

- manufacturer: LAPP KABEL
- type: OLFLEX CLASSIC-110
- rating: 5 × 4.0 mm²

Talon 64 requires:

- 380-400V 50/60 Hz, 3 phase 5 wire, 16 amp service required.

Machine is supplied with:

Cord

- manufacturer: SCAME PARRE
- type: 211.3237
- rating: 346V-415V, 32A, 3P+N+E

Plug

- manufacturer: LAPP KABEL
- type: OLFLEX CLASSIC-110
- rating: 5 × 4.0 mm²

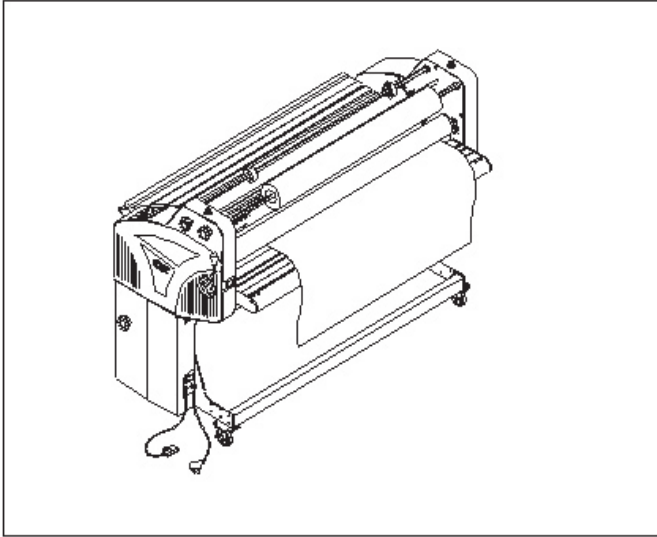


Fig 4

Installation

1. **Shipping damage should be brought to the immediate attention of the delivering carrier.**
2. With assistance, carefully roll the laminator into position over flat and even surfaces.
3. The laminator should be positioned to allow exiting film to flow freely to the floor or a work table (Figure 4). Accumulation of laminate immediately behind the laminator as it exits the equipment may cause the film to wrap around the pull rollers, resulting in a "jammed" condition.
4. Avoid locating the laminator near sources of heat or cold. Avoid locating the laminator in the direct path of forced, heated or cooled air.
5. Once the laminator has been properly positioned, lock the castors in place. Locking the castors prevent the machine from rolling during set up, operation or servicing.
6. The heaters must be installed by a GBC qualified service technician. Refer to your Warranty section for explanation of "Qualified".
7. Connect the attachment plug provided with the laminator to a suitably grounded outlet. **Avoid connecting other equipment to the same branch circuit to which the laminator is connected, as this may result in nuisance tripping of circuit breakers or blowing fuses.**

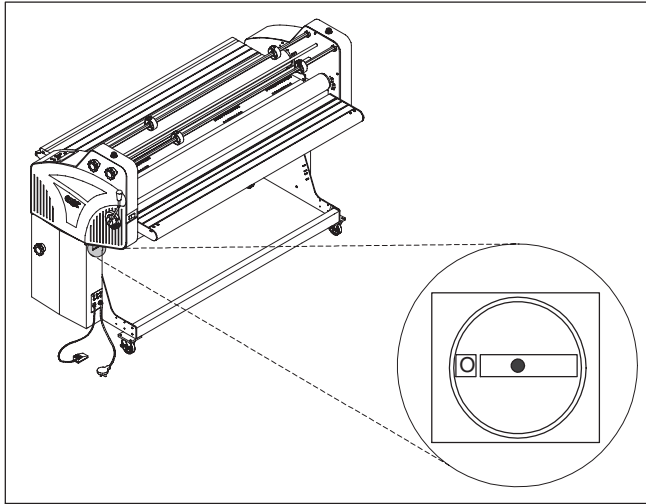


Fig 5

Control Guide

A. POWER ON/ OFF (I/O): (Figure 5) Located at the back left of the machine applies power to the laminator. The control panel display will illuminate when switch is rotated to the “I” position. The off position, marked “O”, removes power from the laminator.

B. CONTROL PANEL DISPLAY: (Figure 6) Illuminates when the laminator is plugged in and **POWER ON/ OFF** is in the on, (I), position. Displays settings for top heater, bottom heater, speed, Job, mode and ready/wait/ positioning indicator.

ROLLER POSITION INDICATOR: Displays the current main roller position. In figure 7, the roller is shown in the “Release” position. Refer to Roller Handle for more information.

READY/WAIT INDICATOR: “READY” appears when actual temperature is equal to (+/- 5) set temperature. “WAIT” appears when actual temperature is lower than the set temperature. “WAIT” appears when actual temperature is higher than the set temperature.

POSITIONING INDICATOR: “Positioning...” appears in place of the ready/ wait indicator any time the main rollers are traveling in an upward or downward motion.

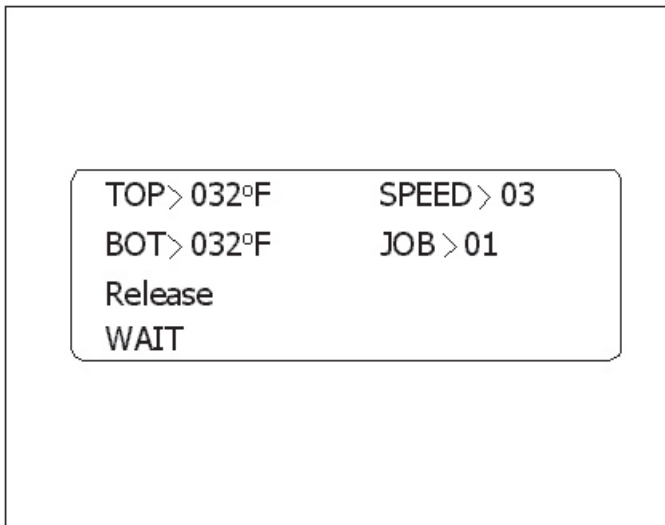


Fig 6

C. CONTROL PANEL: (Figure 7)

MASTER DIAL: Increases (+) or decreases (-) the numeric value for the selected setting when turned. Press and hold the dial to display actual temperature of top and bottom main rollers.

Top Temp.: When pressed, permits increasing or decreasing of the top temperature by turning the **MASTER DIAL** and is indicated on the control panel display. Range is room temp. to 266°F (130°C).

Bottom Temp.: When pressed, permits increasing or decreasing of the bottom temperature by turning the **MASTER DIAL** and is indicated on the control panel display. Range is room temp. to 266°F (130°C).

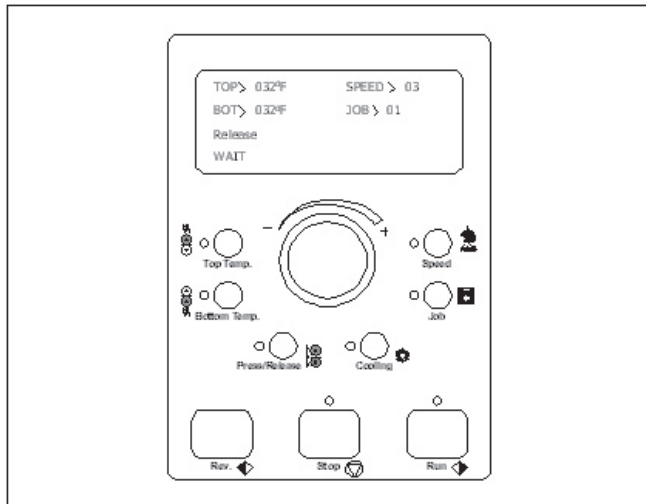


Fig 7

Press/ Release: When pressed, raises the upper main roller over riding the pull roller handle setting. When pressed again, reverts to current pull roller setting.

Cooling: (Figure 8) When pressed, turns on the cooling fans. When pressed again, turns off the cooling fans.

JOB When pressed, permits scrolling of job numbers by turning the MASTER DIAL and is indicated on the control panel display. Range is 1 - 10. Job 10 is reserved for running Accushield material.

To store parameters for a particular job number, select the desired job number location, enter the upper and lower temperatures and speed, then press **JOB**.

SPEED: When pressed, permits increasing or decreasing of speed by turning the MASTER DIAL and is indicated on the control panel display. Range is 1 - 10.

REV When pressed and held, reverses roller movement to clear film jams and wrap-ups.

STOP Stops the movement of the rollers.

RUN When pressed, activates rollers for normal operation.

D. REWINDER SELECTION SWITCH: (Figure 9) This switch enables the operator to control the function of the upper rewind/ unwind shafts.

I In this position, turns the power on to the upper front rewind/ unwind shaft.

⊖ In this position, neither the upper front or upper rear rewind/ unwind shaft is selected for motor power.

II In this position, turns the power on to the upper rear rewind/ unwind shaft.

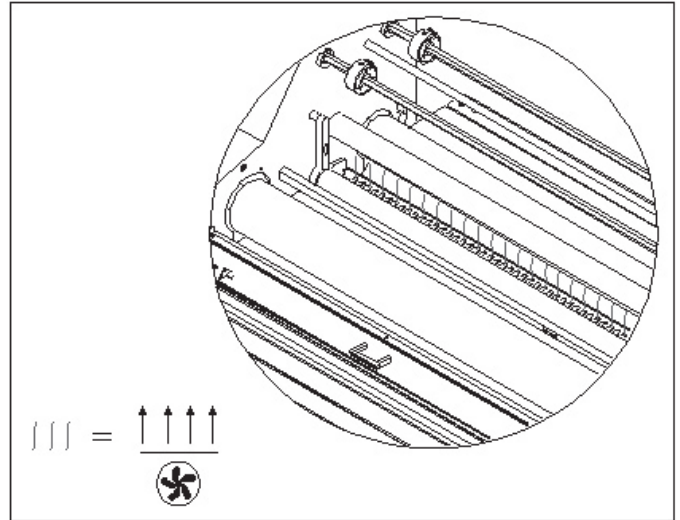


Fig 8

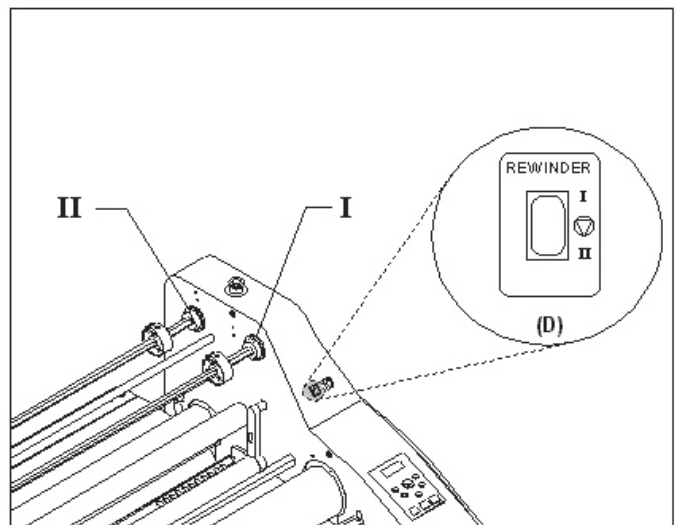


Fig 9

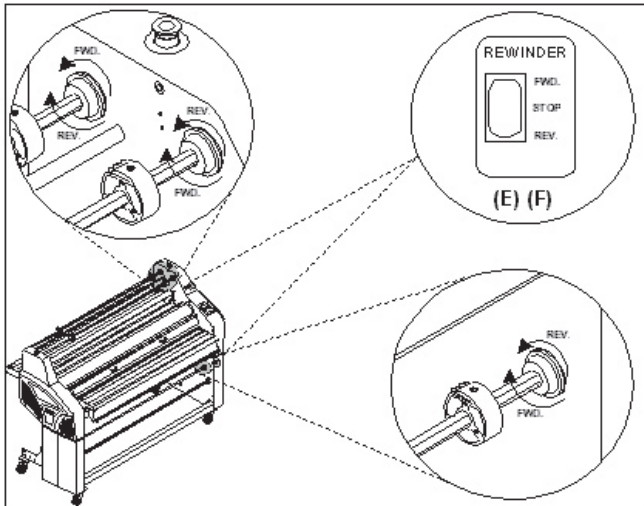


Fig 10

E. UPPER REWINDER DIRECTION SWITCH: (Figure 10) This switch enables the operator to control the direction of the upper rewind/ unwind shafts.

“**FWD.**”: In this position, the motor runs in a forward direction.

“**STOP**”: Stops the rewriter motor for the rewind/ unwind shaft selected.

“**REV.**”: In this position, the motor runs in a reverse direction.

F. LOWER REWINDER DIRECTION SWITCH: (Figure 10) This switch enables the operator to control the direction of the Lower rewind/ unwind shaft.

“**FWD.**”: In this position, the motor runs in a forward direction.

“**STOP**”: Stops the rewriter motor for the rewind/ unwind shaft selected.

“**REV.**” : In this position, the motor runs in a reverse direction.

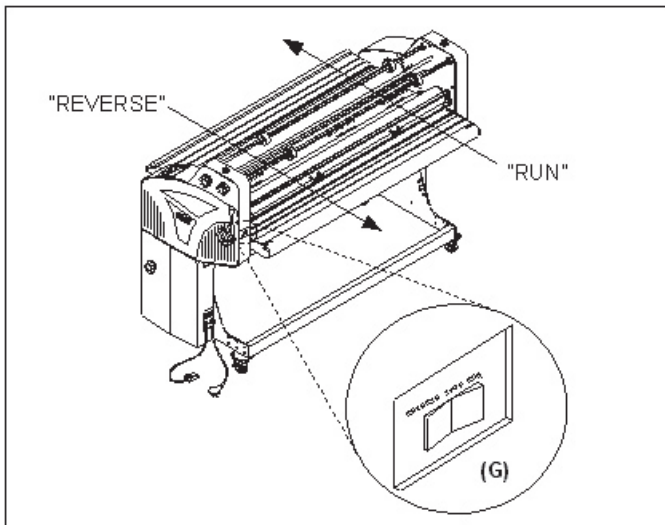


Fig 11

G. REAR CONTROL SWITCH: (Figure 11) This switch enables the operator to run jobs from the rear operating position of the laminator when rear controls are enabled.

– “**REVERSE**”: In this position, the rollers turn from the front operating position towards the rear operating position.

– “**STOP**”: Stops the movement of the rollers.

– “**RUN**”: In this position, the rollers turn from the rear operating position towards the front operating position.

– **ENABLE REAR CONTROL SWITCH:** To enable the rear control switch, press and hold **JOB** until you hear a beep, approximately 3 seconds. **REAR CONTROL** replaces **READY/ WAIT** on the control panel display.

Replace the rear slitter with the safety shield properly installed and latched.

– **DISABLE REAR CONTROL SWITCH:** Press and hold **JOB** again to disable the rear control switch.

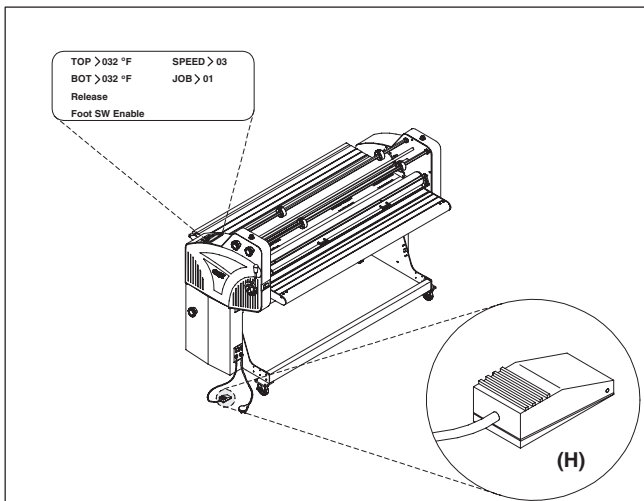


Fig 12

H. FOOT SW ENABLE: (Figure 12) In this mode permits operation using the footswitch. Refer to Item **V. FOOTSWITCH** for operation.

Features Guide

A. E-STOP: (Figure 13) Two E-STOP buttons exist on the laminator. One on each side of the upper cabinet. To engage (1), press either push button, roller movement is stopped. To disengage (2), turn the push button clockwise once the emergency condition has been resolved.

B. SAFETY SHIELD INTERLOCK LATCH: (Figure 14) Used to lock the safety shield into position and activate an interlock switch. The interlock latch is located on the left side of the safety shield. When pushed to the full left (1), the safety shield is locked. When pushed to the full right (2), the safety shield is unlocked.

C. SAFETY SHIELD: (Figure 14) Prevents entanglement, entrapment and inadvertent contact with the heat rollers. The laminator will operate only when the Safety Shield is located in the fully locked position. To remove the safety shield, unlock the safety shield interlock latch and lift the safety shield (1) up and away from the safety shield mounting pins (2).

D. FEED TABLE: (Figure 15) The Feed Table is used to position items for lamination. The laminator will operate only when the Feed Table and Feed Table Latch are properly installed.

E. HEAT ROLLERS: (Figure 15) Silicone rubber coated steel tubes heat the laminating film and press the heated film to the items being laminated. Heat is provided by an internal heating element. The heat rollers are motor driven for ease of loading new film.

F. PULL ROLLERS: (Figure 15) The pull rollers, located at the back of the laminator, are motor driven. They simultaneously pull the film and improve the quality of the laminated item.

G. ROLLER HANDLE: (Figure 16) The roller handle manually sets the position of the pull rollers while simultaneously electronically setting the main rollers.

Available settings are;

- Release
- 15 mm Mounting
- 10 mm Mounting
- 5 mm Mounting
- 3 mm Mounting
- Low-Prs Laminating
- Mid-Prs Laminating
- High-Prs Laminating
(Prs = pressure)

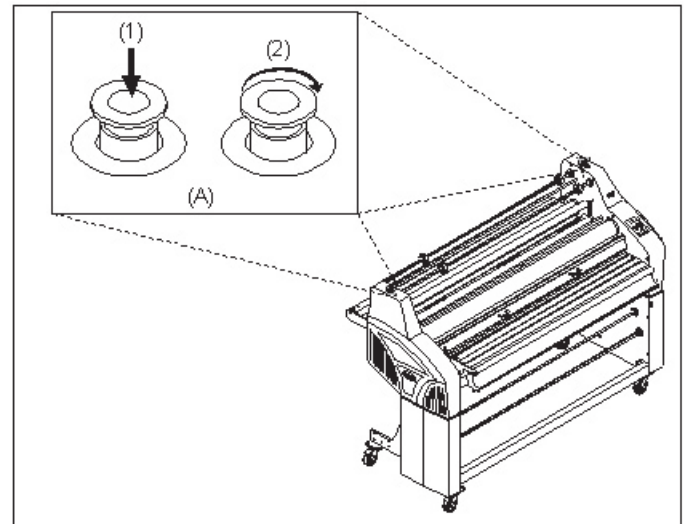


Fig 13

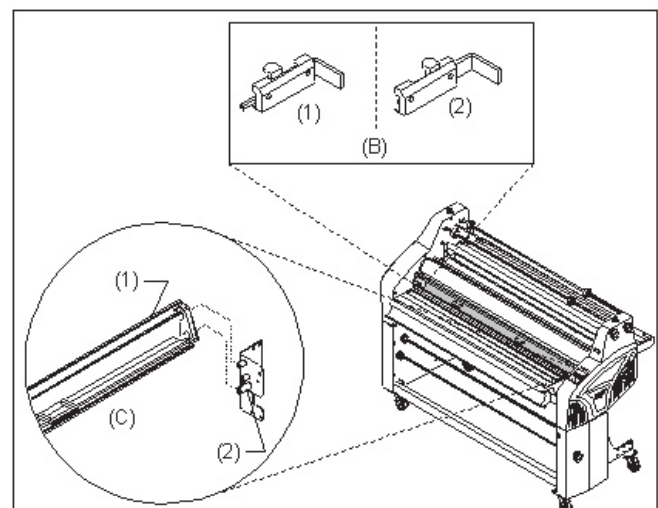


Fig 14

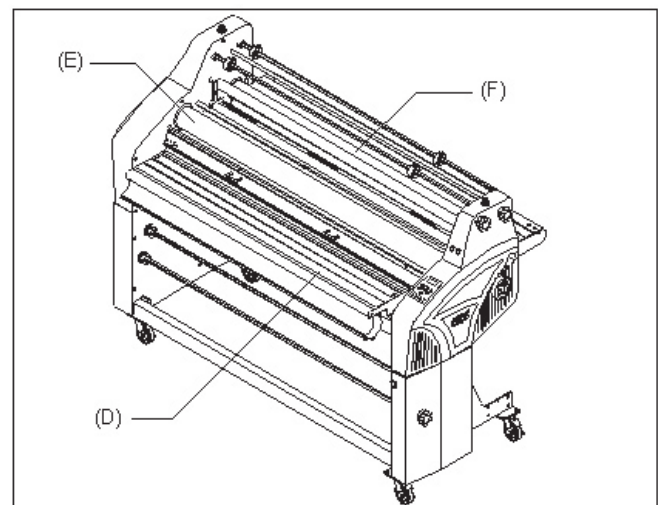


Fig 15

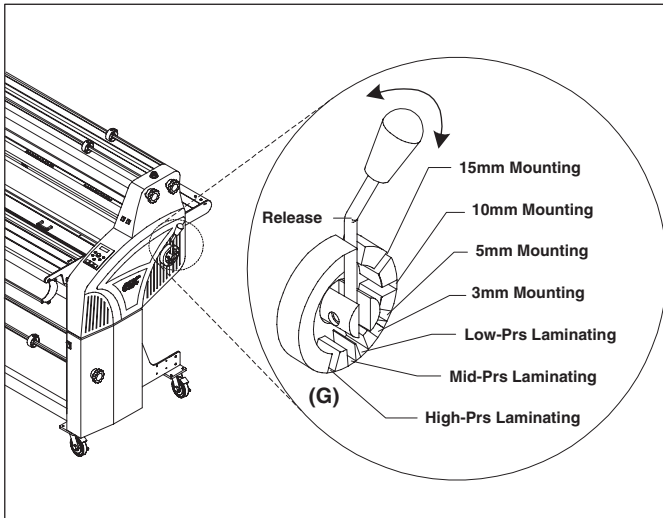


Fig 16

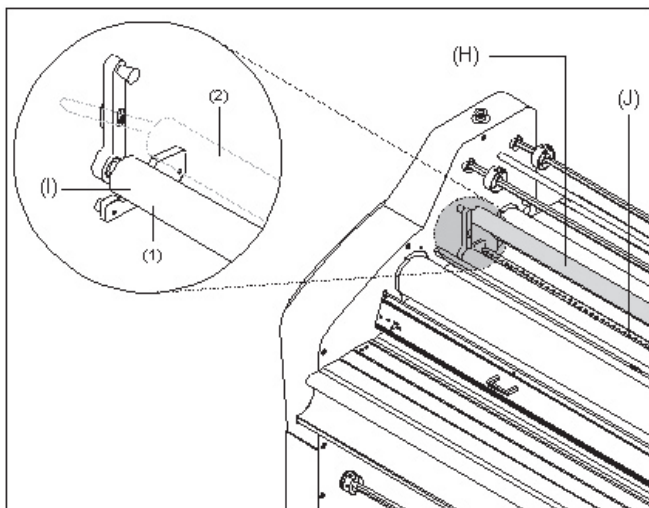


Fig 17

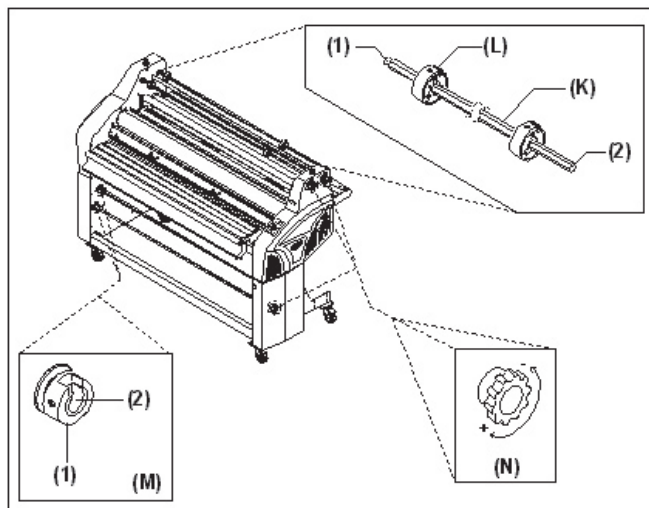


Fig 18

H. IDLER BAR: (Figure 17) The idler bars, located near each heat roller, are used to direct the film to the heat roller nip.

I. CHILL IDLER: (Figure 17) Assist in the cooling process of the web material as it exits the heat rollers.

To engage the chill idler, grip the chill idler handles located on each side of the chill idler and lower to the web position (1). To disengage the chill idler, move the chill idler to it's rest position (2).

J. COOLING FANS: (Figure 17) Assist in the cooling process by pushing unheated air onto the web

K. FILM SHAFT: (Figure 18) The film shaft holds the film supply on the machine.

To remove the film shaft, lift up on the round end (1) of the unwind/ rewind shaft then pull the hex end (2) of the shaft out and away from the laminator.

L. CORE ADAPTORS: (Figure 18) Hold and lock the rolls of film on the shafts to prevent side to side shifting.

M. LOWER SHAFT LOCK: (Figure 18) Secures the left side of the lower shafts. To remove a shaft, turn the outer dial (1) opening so it aligns with the inner u-channel (2) opening and lift up and out.

N. UNWIND/ REWIND TENSION: (Figure 18) Used to apply resistance to the film shaft.

To increase film shaft tension, turn the film shaft tension knob clockwise. Counter clockwise will decrease film shaft tension.

O. REWIND SHAFT: (Figure 19 on next page) The rewind shaft holds the rewind tube on the machine.

P. REWIND TUBE: (Figure 19) The two rewind tubes located at the front of the machine are used to rewind release liners. The one located at the rear of the machine is used to rewind the finished product.

Q. REWIND ADAPTORS: (Figure 19) Hold and lock the rewind tube on the rewind shafts to prevent side to side shifting.

R. REAR TABLE: (Figure 20) Provides a working surface when operating the machine from the rear. This table may also be lowered when webbing for roll to roll applications.

To lower, slide the left and right side rear table latches (1) to the unlatched position and lower the rear table.

S. REAR SLITTER: (Figure 20) Used to cut the film web where it exits the rear of the laminator.

To make a cut, push down on the blade engage lever (2) and slide to the opposite side.

T. FILM WEB: Laminating film loaded into the machine.

U. NIP POINT: The point at which the top and bottom rollers come into contact. The Nip Point of the heat rollers is the place at which the items for lamination are introduced into the laminator.

V. FOOTSWITCH: To operate using the footswitch, there are a number of factors that determine how the machine runs based on the position of the key on the Hand – Foot-switch Control and if the safety shields are in place or not. Refer to the chart below for settings and speeds.

Selector key position	Safety shield on (Latch locked)	Safety shield off (Latch Unlocked)
Clockwise (⇨)	Foot – Pedal: Limited speed of 3f/m or 1m/m	Foot – Pedal: Limited speed of 3f/m or 1m/m.
	Control panel run switch: Limited speed of 3f/m or 1m/m.	Control panel run switch: Limited speed of 3f/m or 1m/m.
Counter Clockwise (⇧)	Foot – Pedal: Up to Max	Foot – Pedal: No function.
	Control panel run switch: Up to Max. speed.	Control panel run switch: No function.
Selector key removed (Key removed when turned counterclockwise)	Foot – Pedal: Up to Max speed.	Foot – Pedal: No function.
	Control panel run switch: Up to Max. speed.	Control panel run switch: No function.

W. PRINT UNWIND BASKET: (Figure 21) Holds a rolled image. Prevents the image from touching the floor.

X. SEPARATOR BAR OPTION: (Figure 20) Required if running Accushield® material.
(Talon 44 Part # 2020580)
(Talon 64 Part # 2020579)

To install, replace the rear slitter with the separator bar.

Y. REWIND KIT OPTION: Enables roll to roll webbing of material. This kit must be installed by a qualified GBC service representative.
(Talon 44 Part # 1715822)
(Talon 64 Part # 1715823)

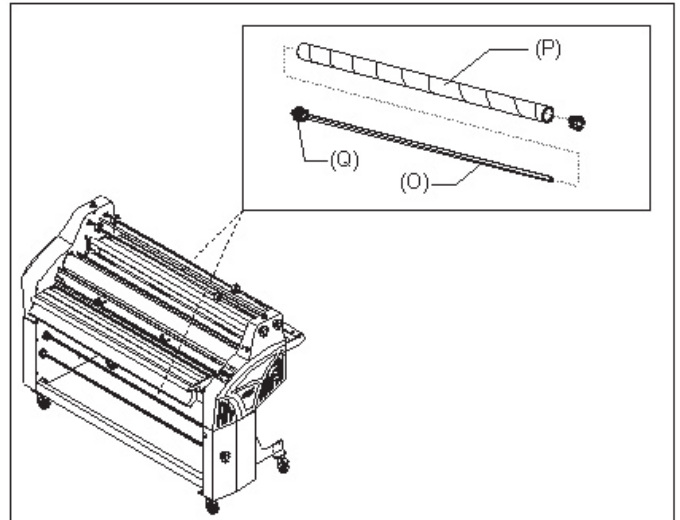


Fig 19

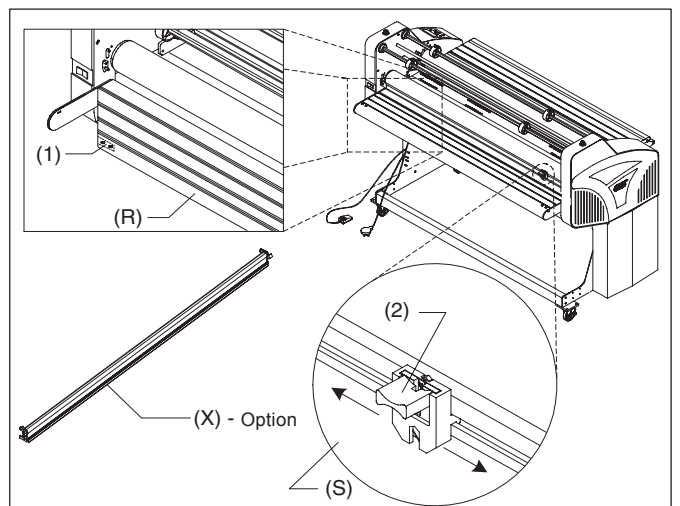


Fig 20

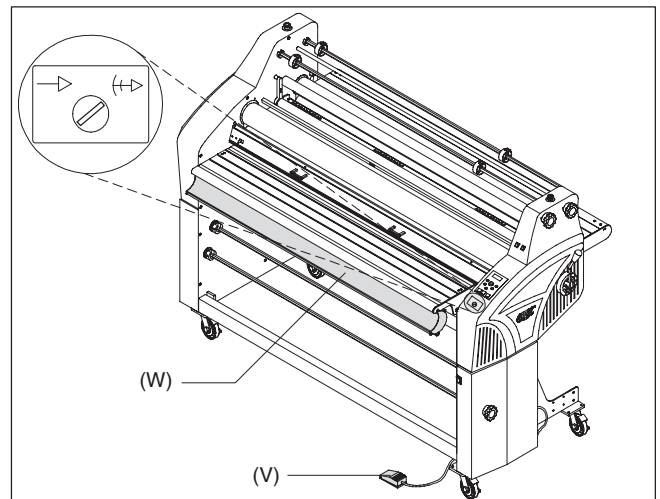


Fig 21

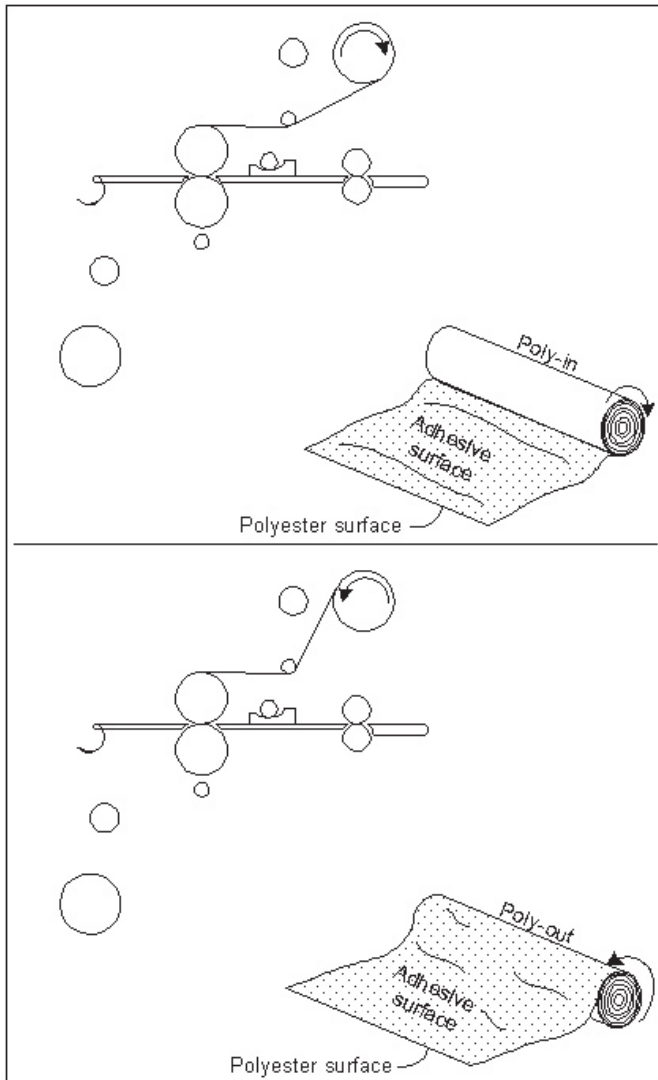


Fig 22

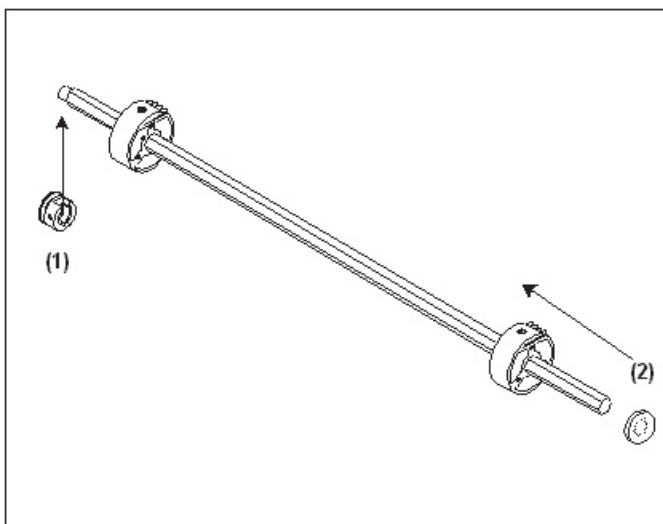


Fig 23

Operating Instructions

Film Loading & Threading

The top and bottom rolls of laminating film must be of the same width and be present simultaneously. A small amount of adhesive will “squeeze out” during lamination. Hardened adhesive deposits can damage the heat rollers. To avoid any damage, select “Low-Prs Laminating” on the roller handle, rotate the rollers at slowest speed with heat on. Refer to the section entitled **CARING FOR THE TALON 44/ 64 LAMINATOR** for instructions regarding removal of the accumulated adhesive.

Adhesive will deposit on the rollers if:

- Only one roll is used.
- Different widths of rolls are loaded together.
- Either roll is loaded adhesive side against a heat roller.
- One or both rolls of film are allowed to run completely off its core.

The adhesive side of the film is on the inner side of the web (Figure 22). The shiny side of clear film must contact the heat rollers. The dull side of the film contains the adhesive. Use extreme caution when loading delustered (matte) film as both sides appear dull.

Always change the top and bottom supply rolls at the same time. Near the end of each roll of GBC laminating film is a label stating “Warning-End of Roll”. The appearance of this label on either the top or bottom roll requires that new rolls of film be installed as soon as the item presently being laminated completely exits the rear of the laminator. Do not introduce any additional items into the laminator when the warning label is visible.

To load a roll of film; (Figure 23)

1. Lift up on the round end, left side (1), of the unwind/rewind shaft.
2. Pull the hex end, right side (2), of the shaft out and away from the laminator.
3. Slide the roll of film onto the film shaft ensuring adhesive side is out.
4. Replace the shaft with the hex end in first then the round end.
5. Center the roll of film.

Loading Top Thermal Film

This procedure describes how to load the upper roll of film onto the laminator. Figure 24 uses poly-in film and the upper rear unwind/rewind position for illustration purpose.

1. Turn the **Power ON/OFF (I/O)** to **ON (I)**. Set top heat temperature for the film type you are using.
2. Ensure no brake tension is applied to the film shaft.
3. Remove the safety shield and pivot the feed table down.
4. Pull the top roll of film down under the idler bar and allow to drape over the top heat roller (Figure 24).
5. Reference one of the loading bottom material procedures.

Loading Top PSA Film

This procedure describes how to load the upper roll of film onto the laminator. Figure 25 uses PSA film and the upper rear unwind/rewind position for illustration purpose.

1. Turn the **Power ON/OFF (I/O)** to **ON (I)**. If the laminator is already hot, turn **POWER ON/OFF (I/O)** to the **OFF (O)** position and allow the unit to cool. Once cool, turn the laminator back on.
2. Ensure no brake tension is applied to the film shaft.
3. Remove the safety shield and pivot the feed table down.
4. Set the roll of film in the rear unwind/rewind position and the rewind tube in the front unwind/rewind position.
5. Pull the top roll of film down under the idler bar and up the upper front rewind tube.
6. Place one piece of masking tape in the center of the film and secure to the rewind tube.
7. Make two full wraps around the rewind tube, then carefully score the laminate without cutting the release liner.
8. Pull the laminate down allowing it to drape over the upper main roller.
9. Reference one of the loading bottom material procedures.

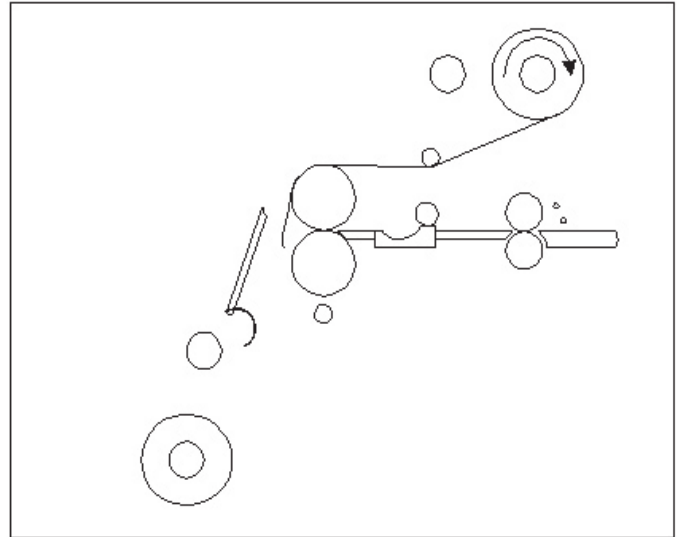


Fig 24

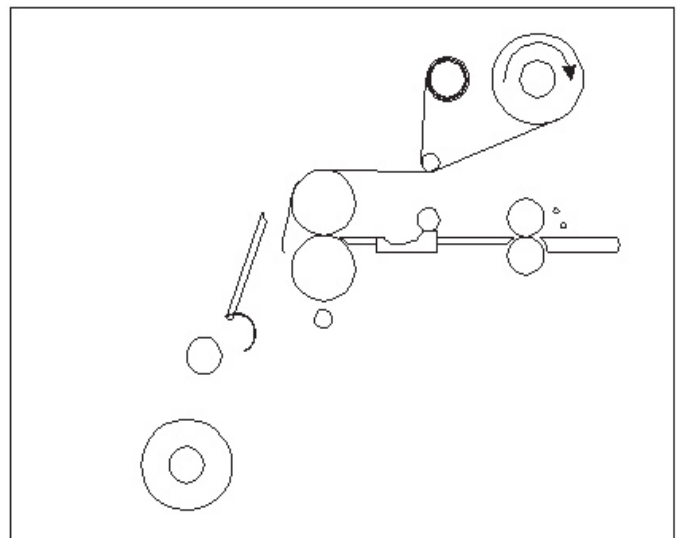


Fig 25

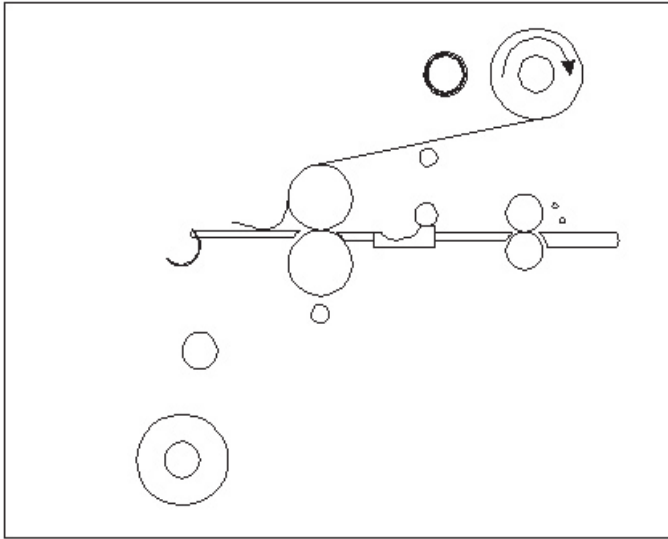


Fig 26

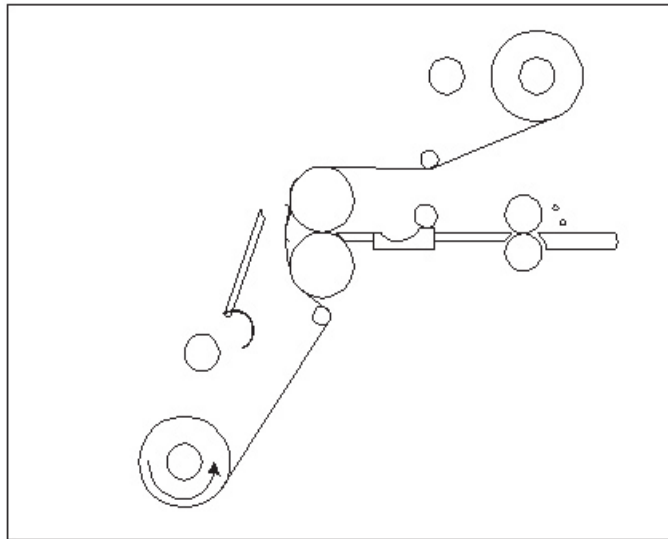


Fig 27

Loading Top Mount Adhesive

This procedure describes how to load a roll of mount adhesive using the upper position for pre-coating (Figure 26).

1. Turn the **Power ON/OFF** to **ON (I)**. If the laminator is already hot, turn **POWER ON/OFF** to the **OFF (O)** position and allow the unit to cool. Once cool, turn the laminator back on.
2. Ensure no brake tension is applied to the film shaft.
3. Remove the safety shield.
4. Set the roll of mount adhesive in the upper rear unwind/rewind position.
5. Pull the mount adhesive over the upper idler and upper main roller allowing the material to rest on the top of the feed table.
6. Reference **THREADING CARD PROCEDURE** next.

Loading Bottom Thermal Film

This procedure describes how to load a roll of thermal film using the lower unwind position for encapsulation (Figure 27).

1. At this point you should have an upper roll of thermal film loaded onto the laminator.
2. Ensure no brake tension is applied to the film shaft.
3. Guide the bottom film around the lower idler.
4. Adhere the film to the loaded upper roll of thermal film by pulling the film up towards the existing draped thermal film over the main rollers.

NOTE: You may follow this procedure to load a roll of Kraft Paper for single side lamination.

5. Reference **THREADING CARD PROCEDURE** next.

Loading Bottom PSA Film

This procedure describes how to load a roll of mount adhesive using the lower unwind position for decaling (Figure 28).

1. At this point you should have an upper roll of PSA film loaded onto the laminator.
2. Ensure no brake tension is applied to the film shaft.
3. Pull the lower roll of film around the lower idler bar and towards the lower rewind.
4. Place one piece of masking tape in the center of the film and secure to the rewind tube.
5. Make two full wraps around the rewind tube, then carefully score the laminate without cutting the release liner.
6. Adhere the lower PSA film to the loaded upper roll of film by pulling the film straight up towards the main rollers.
7. Reference **THREADING CARD PROCEDURE** next.

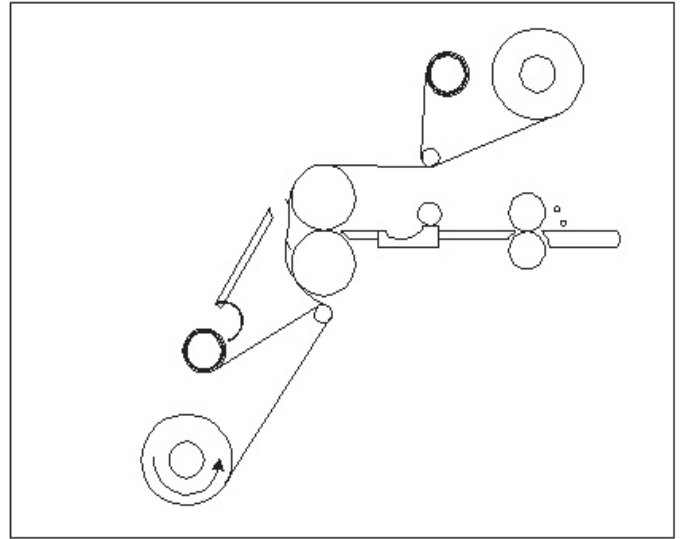


Fig 28

Loading Bottom Mount Adhesive

This procedure describes how to load a roll of mount adhesive using the lower unwind position for decaling (Figure 29).

1. At this point you should have an upper roll of film loaded onto the laminator.
2. Ensure no brake tension is applied to the film shaft.
3. Adhere the mount adhesive to the loaded upper roll of film by pulling the mount adhesive straight up towards the main rollers. Do not web around the lower idler.
4. Reference **THREADING CARD PROCEDURE** next.

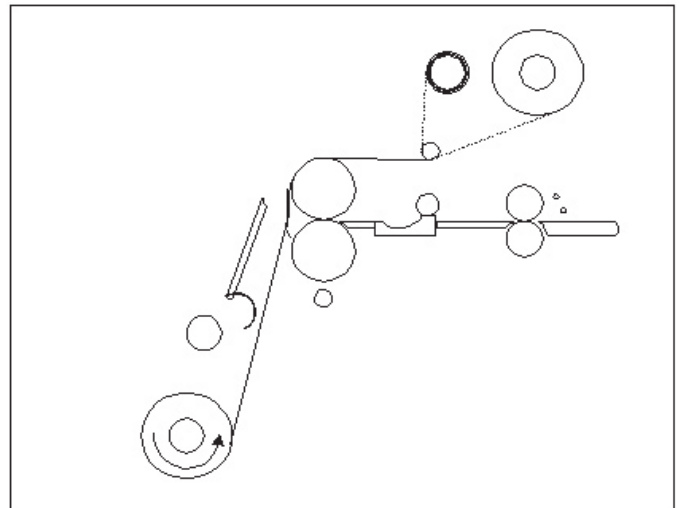


Fig 29

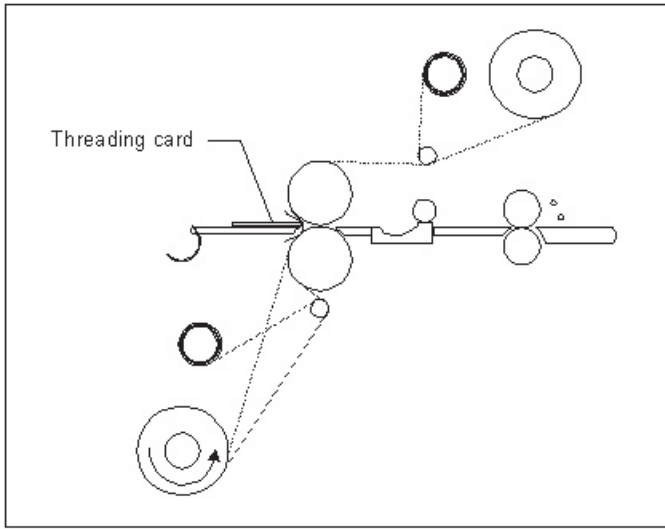



Fig 30

Threading Card Procedure



This procedure describes how to feed two loaded films through the main rollers (Figure 30).

1. At this point you should have an upper roll of film and lower roller roll of film loaded onto the laminator with the appropriate material for your application.
2. The table and safety shield must be properly installed.
3. Push the threading card into the main roller nip. The threading card becomes sandwiched between the upper and lower loaded films.
4. Set the roller handle to a laminating position, press the **RUN** ◀▶ button.
5. Once the threading card has exited the laminator, press the **STOP** ⓧ button.
6. Use the rear slit to cut the threading card from the web.
7. If you are not running the laminator, set the roller handle to the "RELEASE" position.
8. Now refer to the section entitled **START LAMINATING**.

Start Laminating

1. The safety shield and feed table must be in the normal operating position.
2. Select a job mode (**F**) and ensure the proper speed and temperatures are set.
3. Set the roller handle to one of the laminating positions.
4. Press the **PRESS/ RELEASE** () button. The main rollers gap.

CAUTION: HOT ROLLS. Rolls may be hot, use caution to prevent burns.

5. Press the **RUN** () button.
6. Press the **PRESS/RELEASE** () button. The main rollers close.
7. Adjust unwind and rewind tensions as necessary.
8. Align the leading edge of the item square to the heat roller nip (Figure 31).
9. With both hands and an outward force push the image slower than the speed of the rollers into the nip of the heat rollers (Figure 32).

CAUTION: Avoid forcing the image into the main roller nip as this action will cause the corners of the leading edge to buckle and create a wave.

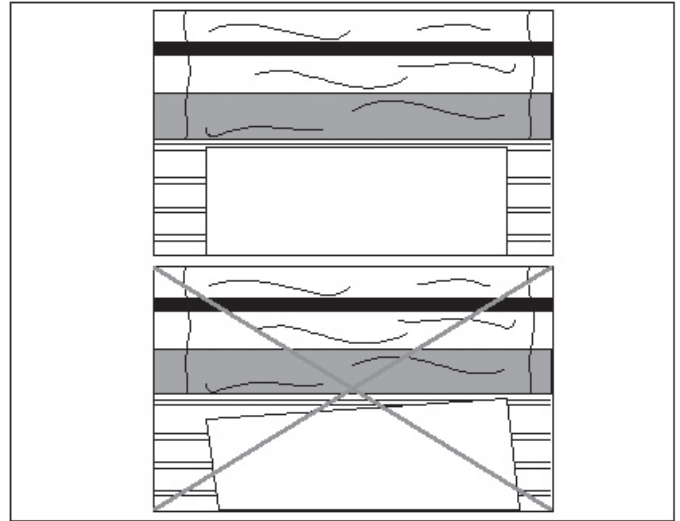


Fig 31

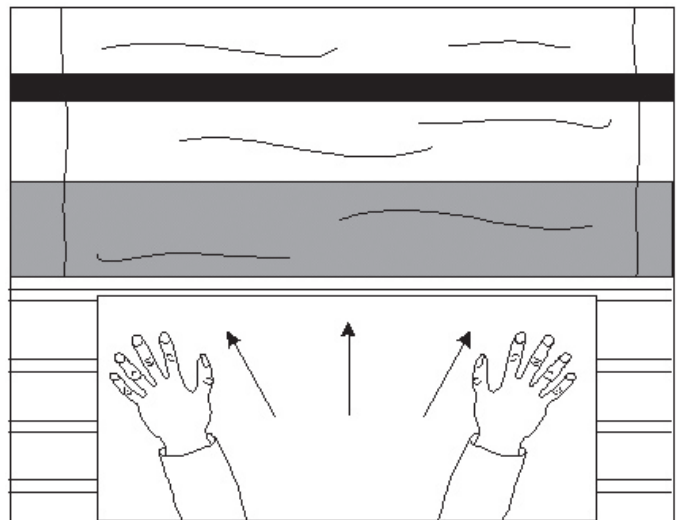


Fig 32

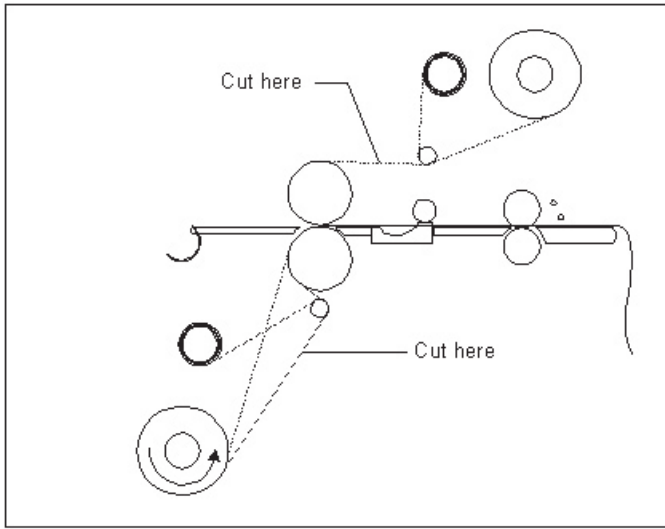


Fig 33

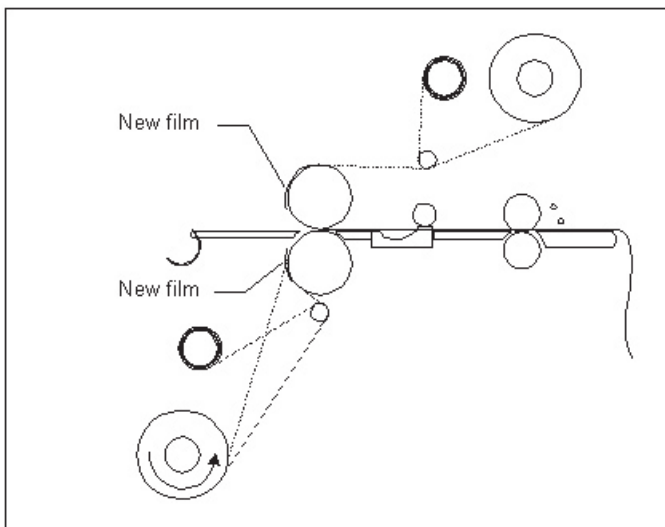


Fig 34

Method for Tracking New Film to Existing Film

The following describes a method for loading film whereby the existing film present on the heat rollers may be used in place of the threading card to draw the new film through the laminator. The adhesive of the existing film must be tacky or liquefied. Leading edges of the new film will be overlapped onto the tacky adhesive of the old film. The existing film and the new film will be pulled through the laminator together.

1. Cut remaining top and bottom film webs between the idler bar and heat rollers (Figure 33).

CAUTION: Do not cut the Heat Rollers when cutting the film web

2. Remove the safety shield and tilt the feed table down.
3. Do not allow the adhesive side of the film to contact the heat or pull rollers. Liquefied or tacky adhesive deposited on heat rollers will require the rollers to be cleaned per the section entitled **CARING FOR THE TALON 44/64 LAMINATOR**.
4. Replace both the top and bottom rolls of film with new rolls. Ensure the adhesive side is facing out.
5. Pull the film around the idler bars, with the exception of PSA mounting adhesives without a release liner.
6. Tack the new film to the existing film on the heat rollers. For PSA film, attach the release liner to the rewind tube (Figure 34).
7. Replace the safety shield and feed table.
8. Use the footswitch to advance the film into the heat roller nip.
9. Observe the film being pulled through the laminator to assure that the remaining existing film and the new film are advancing concurrently. Any separation between the films will require stopping the motor immediately and the situation corrected.
10. Press **STOP** (⏏) once the newly threaded film has completely exited the pull rollers.

To Unweb the Laminator

Unweb the laminator if you are changing film widths, cleaning the rollers or have finished using the machine for the day.

1. Using the rear slitter, cut the output from the web (Figure 35).
2. Set the roller handle to the “**Release**” position.
3. Remove the safety shield and tilt the feed table.
4. Cut remaining top and bottom film webs between supply rolls and heat rollers (Figure 35). **Be careful not to cut any of the rollers!**
5. Carefully grab hold of the web (top and bottom film), from the front operating position and pull towards you (Figure 36).
6. Do not allow the adhesive side of the film to contact the heat or pull rollers.

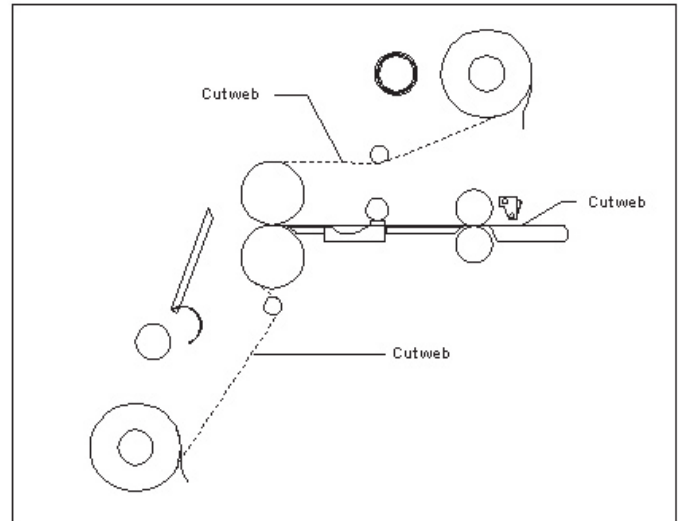


Fig 35

Clearing a Film Jam (Wrap-up)

Film jams (wrap-ups) may occur if the film is loaded backwards or if the area at which film exits the equipment is blocked. The film, when jammed, wraps around the heat rollers during webbing if a threading card is not used or pull rollers during operation.

To clear a jam:

1. Immediately stop the laminator by pressing **STOP** (⏏).
2. Remove the safety shield and tilt the feed table.
3. Press and hold **REVERSE** (⏪) until the jam has cleared the heat rollers or pull rollers.
4. Set the roller handle to the “**Release**” position.
5. Manually assist the material through the main rollers and/ or pull rollers.
6. Once the jam has been cleared, set the roller handle to one of the laminating positions.
7. You can now resume laminating.

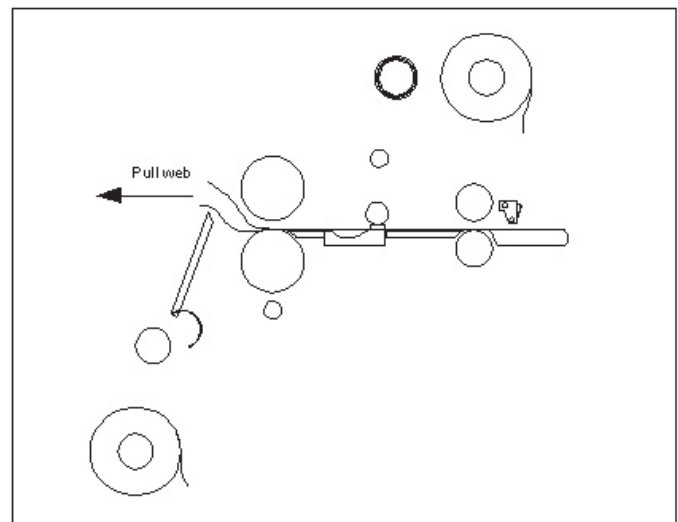


Fig 36

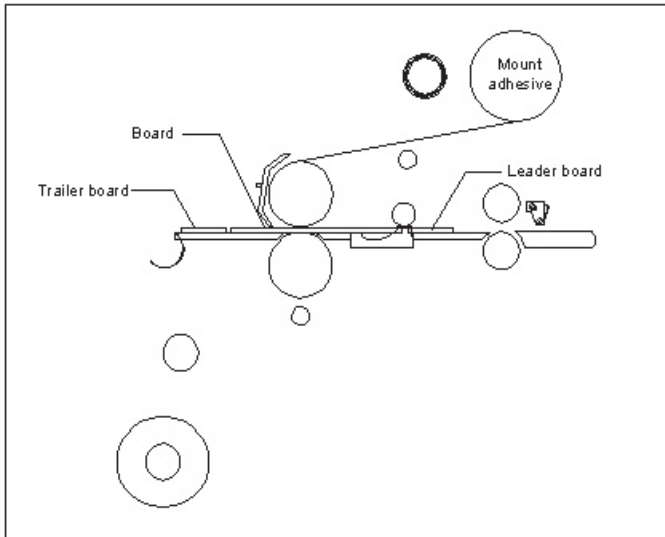


Fig 37

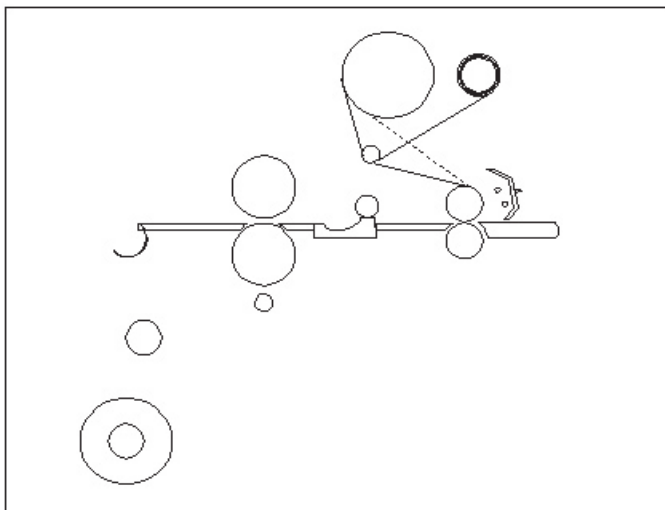


Fig 38

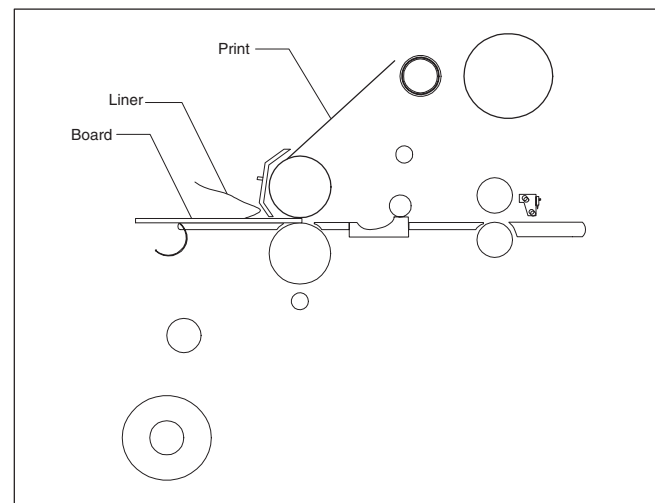


Fig 39

Applications

Tips for Pre-coating Boards (Figure 37)

1. Load the laminator as illustrated in Figure 37.
2. Ensure the chill idler is in the rest position.
3. Set the roller pressure handle to the correct thickness.
4. The width of the roll should not exceed the width of the board by more than 1/2 in. (1.3 cm).
5. Use a leader board to start the run and a trailer board to finish the run.
6. Using the pull rollers will allow you to leave gaps between boards.
7. If not using the pull rollers, have the boards nearby to butt end to end during feeding.

Tips for using the rear rollers (Figure 38)

1. If the front rollers are heated, you may perform certain applications from the rear operating position of the laminator.
2. Ensure the chill idler is in the rest position if using boards.
3. **Ensure the safety shield is located in the rear position.**
4. Ensure the **REAR CONTROLS** have been enabled.
5. You may perform mounting applications, pre-coating applications and single side applications from the rear of the machine.

Tips for Mounting Pre-coated Boards (Figure 39)

1. Load the laminator as illustrated in Figure 39.
2. Ensure the, the rear slitter is to one side and the inline slitter is not obstructing the path of the boards.
3. Heat, 125 °F (52 °C), may assist the process and increase output quality.
4. Do not stop once you have started the mounting process through the machine.

Tips for PSA Encapsulation (Figure 40)

1. Load the laminator as illustrated in Figure 40.
2. Always use two rolls of the same width.
3. Use minimal brake tension to achieve flat output.
4. The separation of the laminate and the release liner should be maintained close to the heat rollers.
5. A little heat, 125°F (52°C), may help eliminate silvering effects associated with PSA films.
6. Use of the chill idler may or may not help in the output quality. Try both methods.

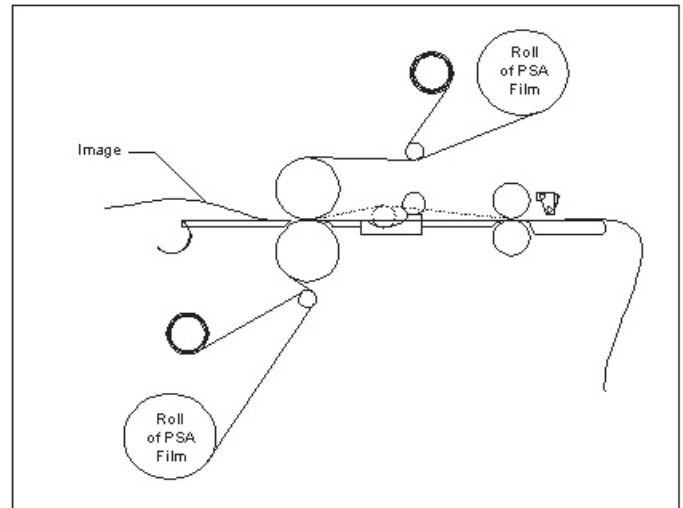


Fig 40

Tips for Thermal Encapsulation (Figure 41)

1. Load the laminator as illustrated in Figure 41 for Poly-in film.
2. Dotted line represents Poly-out film web path.
3. Always use two rolls of film the same width.
4. Use minimal brake tension to achieve flat output.
5. Increase speed gradually to maintain the activating temperature required for the laminate you are using.
6. Length and width of image, ink coverage and paper type may effect the temperature and speed required.

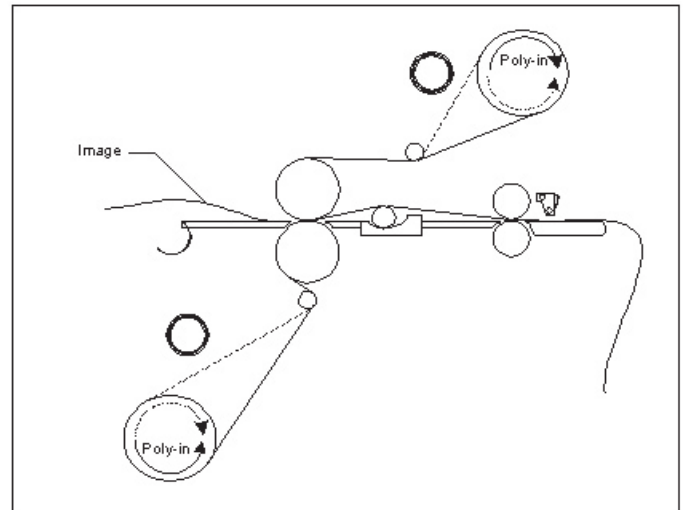


Fig 41

Tips for Accushield (Figure 42)

1. Load the laminator as illustrated in Figure 42.
2. You must have the Separator bar option to accurately run this material.
3. Liner rewind tension will be greater than normal operating standards.
4. Do not attempt to run this material greater than a speed setting of 4.
5. To prevent some adhesive adhering to the rollers, you may choose to use a roll of kraft paper for a carrier with the roll to roll rewind option installed.

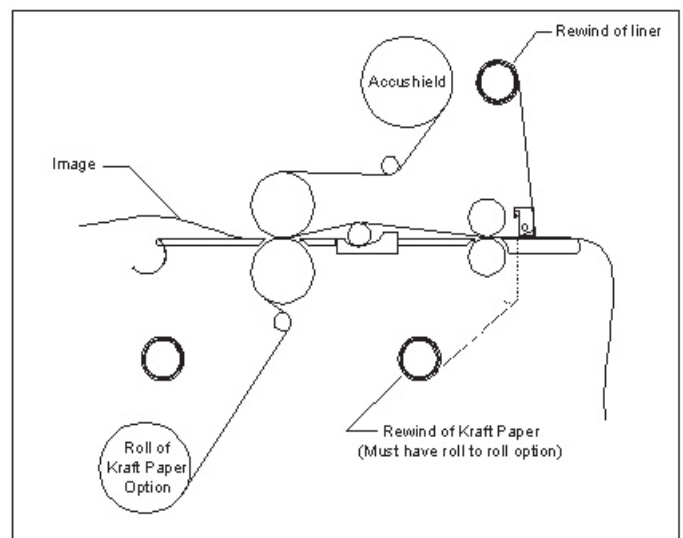


Fig 42

The Art of Lamination

Basic Rules

Do not attempt to laminate abrasive or metal objects such as staples, paper clips and glitter, as they may damage the heat or pull rollers.

Do not force items into the nip area of the heat rollers. An item that is not easily drawn into the laminator by the heat rollers is probably too thick to laminate.

Wrinkles may result if an attempt is made to reposition an item once it has been grasped by the heat rollers.

Do not stop the laminator before an item has completely exited the pull rollers. Even a momentary stop will cause a mark (heat line) on the laminated item.

Good, consistent lamination is a result of combining proper heat, tension and dwell time. Dwell time is controlled by the speed of the motor and is defined as the amount of time the material to be laminated is compressed between the heat rollers.

As a general rule, thicker items and film need to run at slower speeds because they extract more heat from the rollers at a quicker rate. Setting the speed control at slower settings gives the laminator longer dwell time thus allowing proper lamination of thick items. Thinner items, such as standard copier paper (20 lb. bond) and tissue paper, extract less heat from the rollers and can be run at faster speeds.


Film Tension

Proper film tension, known as brake tension, is the minimum amount required to eliminate wrinkles in the finished item. The film should be taut. A properly adjusted roll of film should not require excessive force to turn by hand.

Film tension should be enough to introduce a minor amount of drag as the film unrolls. Insufficient tension causes wrinkles, while too much tension causes stretching (necking). Uneven tension between the top and bottom rolls creates curl. Too much upper tension creates upward curl while too much bottom tension causes downward curl.

The heat roller clutch is set at the factory. Periodic adjustments may be necessary if after adjusting unwind and rewind brake tensions do not improve your output quality.

Heat

The **“WAIT (Too COLD)”** indicator may appear if the speed is set too fast for the material being laminated. Either lower the speed setting or press **STOP**  and wait until the **“READY”** indicator appears.

Operation of the laminator for more than thirty minutes at a time may necessitate a lower speed setting. It is recommended that, during periods of long runs, the items being laminated are alternated between thick and thin. Do not combine thick and thin items at the same time, as this will result in a poor edge seal around the thinner material. If you are unsure that the laminator is set at the proper speed for the item to be laminated, run a test piece (scrap) of the same or similar material through the laminator. This procedure is recommended because rotating the heat roller prior to lamination will more evenly distribute the heat. Make speed adjustments if necessary.

Output

1. **“D” waves in the image (Figure 43 A).**
 - Check paper tension.
 - Paper may be damp or not dry.
2. **“D” waves in the laminate (Figure 43 B).**
 - Change roller handle pressure.
3. **Straight waves in output (Figure 44 A).**
 - Check operational settings for materials being used.
 - Insufficient cooling time.
 - Output was handled prior to cooling.
 - Use cooling feature if not on.
4. **Indent waves in output after pull rollers (Figure 44 B).**
 - Machine was stopped on print.
5. **Angled waves in the output (Figure 45 A & B).**
 - Change roller handle pressure.
 - Check for even paper tension (Figure 43 A only).

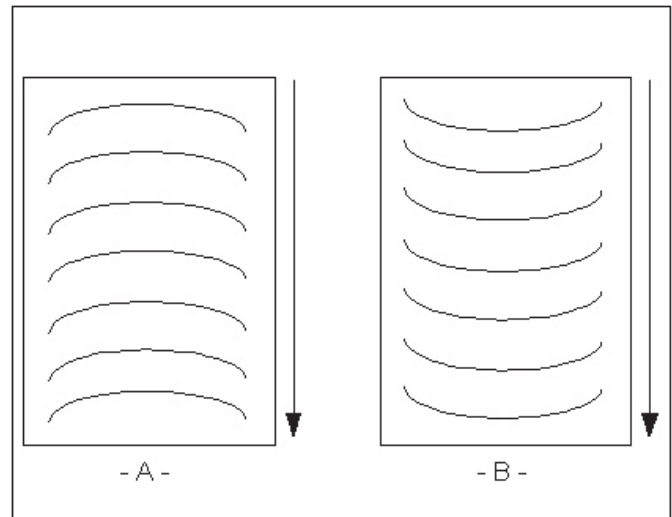


Fig 43

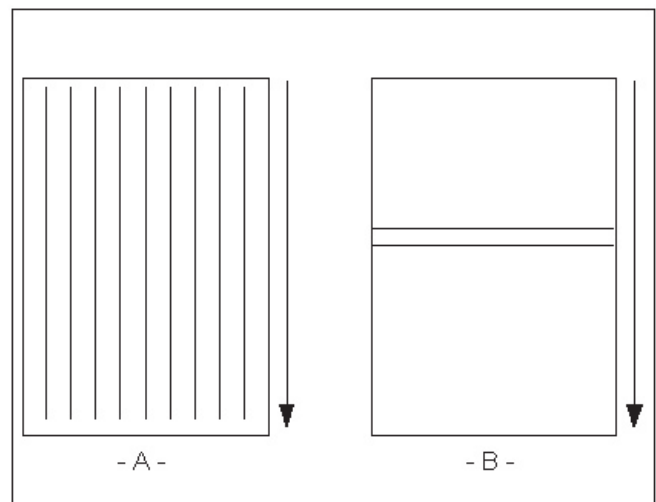


Fig 44

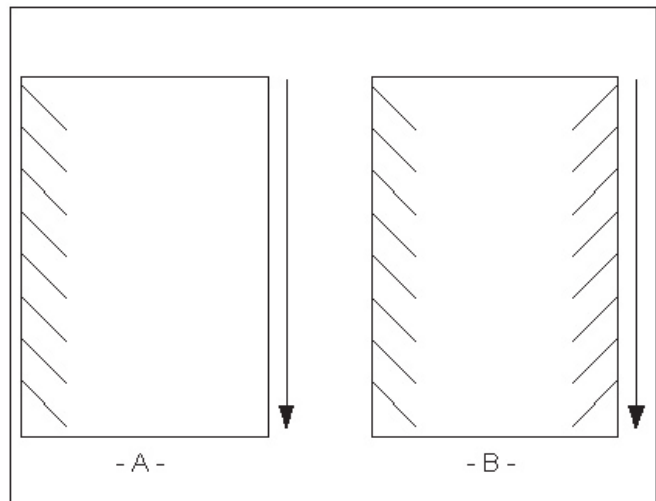


Fig 45

Maintenance

Caring for the GBC Talon 44/64 Laminator

GBC offers Cleaning kits as well as Extended Maintenance Agreements.

Contact your local GBC Service Representative or your dealer/distributor for additional information.

The only maintenance required by the operator is to periodically clean the heat rollers and schedule semi annual maintenance checks.

The following procedure will help keep the heat rollers free of adhesive that has been deposited along the edge of the laminating film. Proper alignment of the rolls of film reduces the amount of "squeeze out".



WARNING: Do not attempt to laminate adhesives marked "Flammable".

- Do not laminate glitter and/ or metallic items. Damage to the rollers may result.



WARNING: Do not apply any cleaning fluids or solvents to the rollers. Some solvents and fluids could ignite on heated rollers.

- Never clean rollers with sharp or pointed objects.
- Hardened adhesive deposits on the rollers can cause damage to the rollers. Rotate the rollers at the lowest speed setting on the control panel.



CAUTION: THE FOLLOWING PROCEDURE IS PERFORMED WHILE THE LAMINATOR IS HOT. USE EXTREME CAUTION.

1. Remove the film from the laminator following the procedure outlined in steps 1 through 6 of the section entitled TO UNWEB THE LAMINATOR.
2. Preheat the laminator until the "READY" indicator appears.
3. Remove the safety shield and tilt the feed table.
4. Rub the top and bottom heat rollers with a 3M™ Scotch-Brite™ pad. **DO NOT USE METAL SCOURING PADS!**
5. Use the footswitch to rotate the lower heat/ pull roller to an unclean portion. The upper heat/ pull rollers are free spinning. Continue this process until the entire surface of both rollers are clean.
6. Refer to the beginning of the section entitled **OPERATING INSTRUCTIONS** to web your laminator.

The information in this publication is provided for reference and is believed to be accurate and complete. GBC is not liable for errors in this publication or for incidental or consequential damage in connection with the furnishing or use of the information in this publication, including, but not limited to, any implied warranty of fitness or merchantability for any particular use.

GBC reserves the right to make changes to this publication and to the products described in it without notice. All specifications and information concerning products are subject to change without notice.

Reference in this publication to information or products protected by copyright or patent does not convey any license under the rights of GBC or others. GBC assumes no liability arising from infringements of patents or any other rights of third parties.

This publication is copyrighted © 2004 by GBC. All rights reserved. The information contained in this publication is proprietary and may not be reproduced, stored, transmitted, or transferred, in whole or in part, in any form without the prior and express written permission of GBC.

Troubleshooting Guide

SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION
<ul style="list-style-type: none"> The control panel display does not illuminate when POWER ON/OFF is in the ON, marked "I", position. 	Laminator not connected to electrical supply.	Insert attachment plug into receptacle.
<ul style="list-style-type: none"> Heat rollers do not turn when I press the RUN (◀▶) button. 	Safety shield is not properly installed. Feed table not properly installed E-STOP is engaged	Remove safety shield and properly replace it. Tilt feed table and properly replace it. Pull out on the E-STOP push button.
<ul style="list-style-type: none"> Heat rollers only turn if I use the "footswitch. 	Laminator is in footswitch mode.	Disengage the footswitch mode.
<ul style="list-style-type: none"> Rear controls do not operate. 	Rear controls are not enabled. Safety shield is not installed in rear position.	Enable rear controls. Remove the rear slitter and install the safety shield.
<ul style="list-style-type: none"> Laminated items exhibit curling. 	Tension between the top and bottom film roll is unequal. Tension on top or bottom roll offilm is too film loose. Bottom film roll may be improperly loaded.	Adjust film tension. Adjust film tension. Make sure bottom roll of film is around idler bar and the it is in the normal operating position.
<ul style="list-style-type: none"> Adhesive deposited on heat rollers. 	Top and bottom film webs not aligned. Laminate improperly loaded.	Release heat and pull roller pressure, align the rolls of film. Adhesive (matte) side of laminate film may be against the heat rollers. Unweb and reload the film properly.
<ul style="list-style-type: none"> Unsatisfactory adhesion of laminate. 	Speed setting too fast for type of material being laminated. Insufficient heat. Laminate improperly loaded. Heat rollers require cleaning. Laminated item unsuitable for adhesion.	Lower speed setting by pressing SLOW button to slower speed Wait for " READY " indicator to appear in the control panel display. Adhesive side of film must be facing away from the heat rollers. Bottom roll of film not threaded behind the idle bar. Clean heat rollers per procedure in section CARING FOR THE GBC TALON 44/64 CE LAMINATOR . Item may be dirty or may have nonporous surface that is extremely difficult to laminate.
<ul style="list-style-type: none"> Waves in my output 	See sub section OUTPUT. Nips may be out of calibration.	Under section titled THE ART OF LAMINATION. Place a service call for calibration check.

SERVICE AGREEMENT

GBC's Equipment Maintenance Agreement will insure the quality performance and long life built into your laminator.

A service charge for travel time, labor and parts may be incurred for each out of warranty service call. GBC's Equipment Maintenance Agreement decreases these expenses and protects your valuable investment. GBC offers several types of agreements to suit your needs and budget. To contact GBC write to:

GBC NATIONAL SERVICE
ONE GBC PLAZA
NORTHBROOK, IL 60062 U.S.A.
1.847.272.3700

EUROPE: GBC FILM GROUP EUROPE
MERCURIUSSTRAAT 9
6468 ES KERKRADE
THE NETHERLANDS

PHONE: +31 (0) 45 535 7651
FAX: +31 (0) 45 535 7878
E-MAIL: info@gbcfilms.com
INTERNETS: www.gbcfilm.com



General Binding Corporation
One GBC Plaza
Northbrook, IL 60062-4195